

PA28-24-wP (Z)6 Data Sheet

28 pin PLCC socket/24 pin DIP 0.6" plug


Introduction

This data sheet describes several adapters. They are all similar in that they have 28 pin PLCC test sockets and 24 pin DIP plugs. They differ in the wiring from PLCC device to DIP plug.

The "w" in PA28-24-wP(Z)6 above identifies the adapter's wiring. The "Z" identifies a lidded ZIF socket. Without the "Z" it has an Auto-eject socket. The following chart identifies all the versions currently available.


| Adapter | Wiring |
|----------------|--------|
| PA28-24-1P(Z)6 | 1 |
| PA28-24-2P(Z)6 | 2 |
| PA28-24-3P(Z)6 | 3 |
| PA28-24-5P(Z)6 | 5 |
| PA28-24-7P(Z)6 | 7 |

Adapter Dimensions

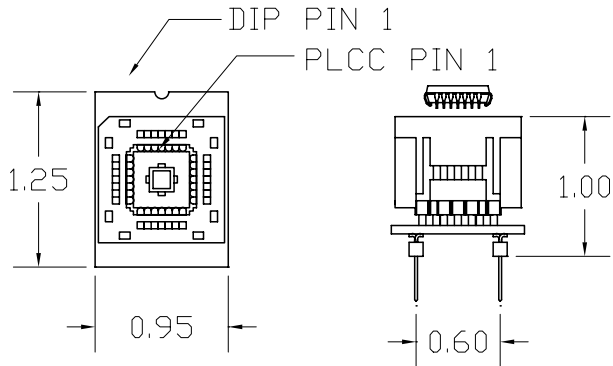

Press rim to open socket, press device to close

PA28-24-wP6

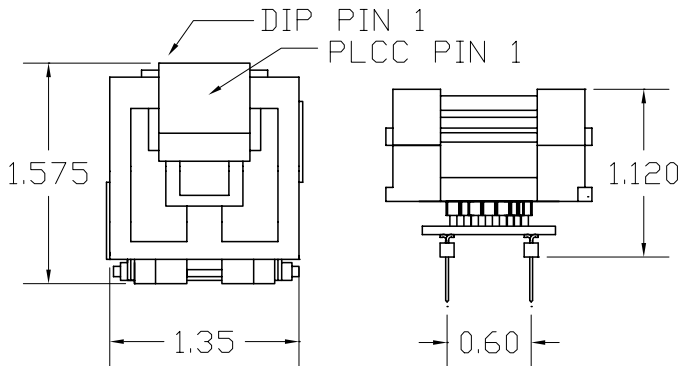

PA28-24-wPZ6

Adapter Construction

The adapter is made up of 2 sub-assemblies. They assemble via connectors making the adapter modular. This way the sub-assemblies can be replaced when they wear out. When disassembling the adapter, take care not to bend the pins. When reassembling the adapter note the pin 1 indicators to align the parts correctly.

PLCC Auto-Eject test socket:

Yamaichi Part #: IC120-0284-508 LSC Part #: 28-508

PLCC Lidded ZIF socket:

Yamaichi Part #: IC51-0284-399 LSC Part #: 28-399

PA28-24-w

Accepts the test socket and performs the wiring shown in the Adapter Wiring section

Adapter Wiring

Several different wiring patterns are described in this data sheet. Each wiring pattern is identified by a number. The first chart abbreviates the wiring description by listing the device pins that are skipped and shorted together. The second chart shows in detail how each device pin is connected to the adapter's plug.

| Mapping | Skips(shorts) |
|---------|---------------------------|
| 1 | 5,8,11,19 |
| 2 | 1,8,15,22 |
| 3 | 5,10,21,22 |
| 5 | 1,10,15,21 |
| 7 | 1,11,15,19,(28-1),(14-15) |

| PLCC Device | PLUG pin for each mapping | | | | |
|-------------|---------------------------|-----|-----|-----|-----|
| | '-1 | '-2 | '-3 | '-5 | '-7 |
| 1 | 1 | - | 1 | - | 24 |
| 2 | 2 | 1 | 2 | 1 | 1 |
| 3 | 3 | 2 | 3 | 2 | 2 |
| 4 | 4 | 3 | 4 | 3 | 3 |
| 5 | - | 4 | - | 4 | 4 |
| 6 | 5 | 5 | 5 | 5 | 5 |
| 7 | 6 | 6 | 6 | 6 | 6 |
| 8 | - | - | 7 | 7 | 7 |
| 9 | 7 | 7 | 8 | 8 | 8 |
| 10 | 8 | 8 | - | - | 9 |
| 11 | - | 9 | 9 | 9 | - |
| 12 | 9 | 10 | 10 | 10 | 10 |
| 13 | 10 | 11 | 11 | 11 | 11 |
| 14 | 11 | 12 | 12 | 12 | 12 |
| 15 | 12 | - | 13 | - | 12 |
| 16 | 13 | 13 | 14 | 13 | 13 |
| 17 | 14 | 14 | 15 | 14 | 14 |
| 18 | 15 | 15 | 16 | 15 | 15 |
| 19 | - | 16 | 17 | 16 | - |
| 20 | 16 | 17 | 18 | 17 | 16 |
| 21 | 17 | 18 | - | - | 17 |
| 22 | 18 | - | - | 18 | 18 |
| 23 | 19 | 19 | 19 | 19 | 19 |
| 24 | 20 | 20 | 20 | 20 | 20 |
| 25 | 21 | 21 | 21 | 21 | 21 |
| 26 | 22 | 22 | 22 | 22 | 22 |
| 27 | 23 | 23 | 23 | 23 | 23 |
| 28 | 24 | 24 | 24 | 24 | 24 |



Adapters-Plus Inc.

P.O. BOX 900
 Tracy, Ca 95378
 ph.209-839-0200
 fax.209-839-0235
 email: sales@adapt-plus.com

www.adapt-plus.com